



Visit us at : <http://www.lgservice.com>

LG

LG LGMV USB Cable

Installation Manual

Model: PRCTFE1

IMPORTANT

- Please read this Installation Manual carefully and thoroughly before installing and operating your room air conditioner.
- Please retain this Installation Manual for future reference after reading it thoroughly.

TABLE OF CONTENTS

■ Installation	3
1. Parts Description	3
2. USB Module Driver Install	4
3. Port Set-up	10

Installation

1. Part description (PRCTFE1)

This USB type JIG is used for interface between Air-conditioner and PC by using the LGMV Program

1) Specification

- ① Model Name : PRCTFE1
- ② Feature



< Extension cable 3m> Ass'y>



<Serial to LGMV USB Module Ass'y>




<Interface Cable Ass'y>



* NOTE : Recommended PC Specification to install LGMV Main program

- CPU : Over Pentium IV 1.6GHz
- Main Memory : Over 256MB
- Operating System : Windows NT/ 2000/ XP/ 2003 (include Microsoft Java VM)
- Hard Disk : More than 600MB when operating
- Web browser : Over Internet Explore 5.0


2. USB Module Driver Install

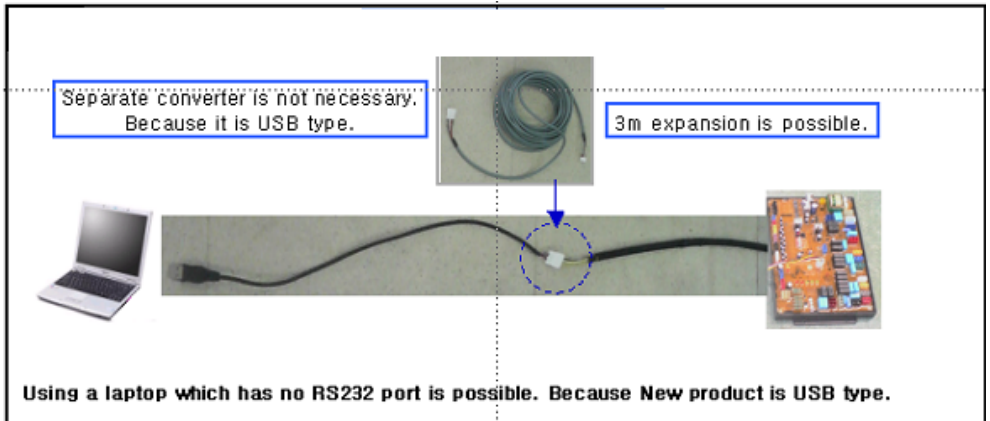

- 1) Copy 'Daeho USB Driver Install.zip' file In the CD
- 2) Paste 'Daeho USB Driver Install.zip' file In your PC or Laptop
- 3) Extract 'Daeho USB Driver Install.zip' file

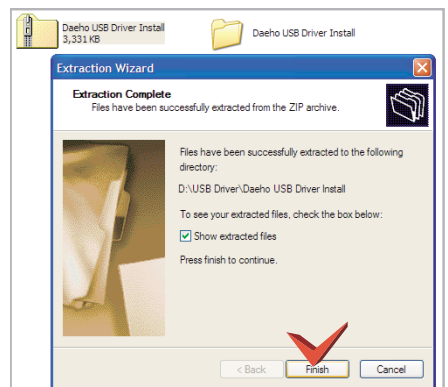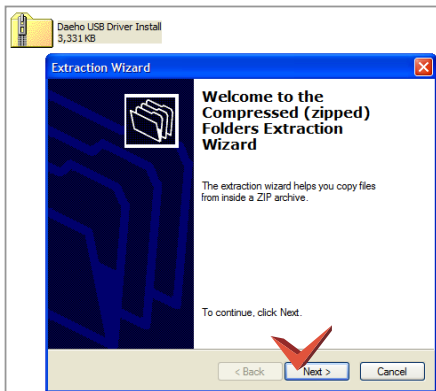


- 4) Execute 'DaehoVCPInstaller.exe' file in 'Daeho USB Driver Install' Folder which has just extracted folder

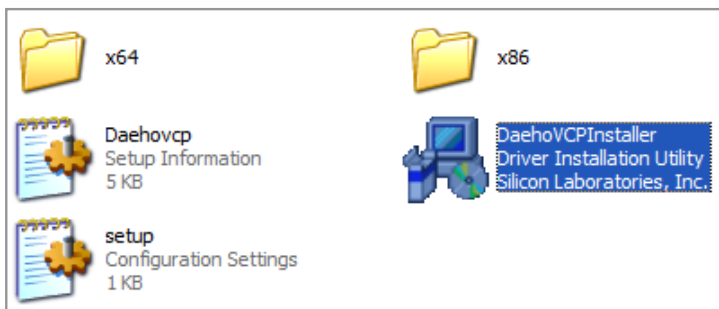





5) Click 'Install'

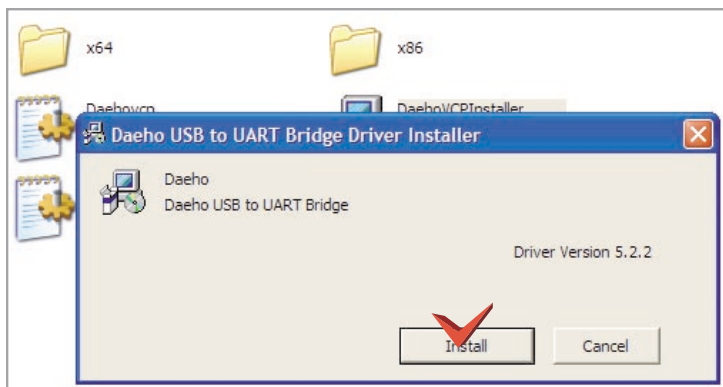

6) Now Installing wait..

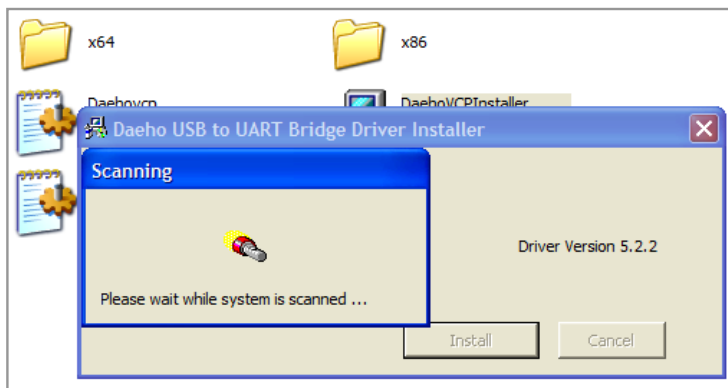


7) Click 'Continue Anyway' button

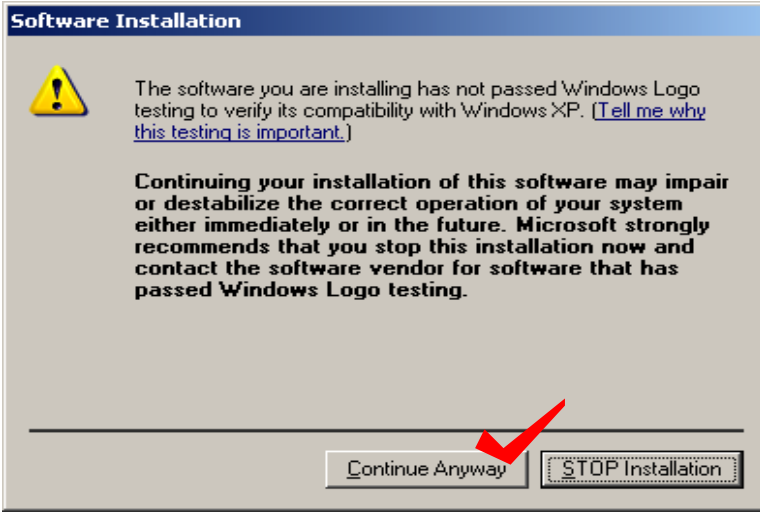

8) Restart Click 'Yes' and Restart Your PC or Success Window is come out(It depends OS System in your PC)



9) When the Installation is completed, please insert USB Module in USB PORT of the PC.

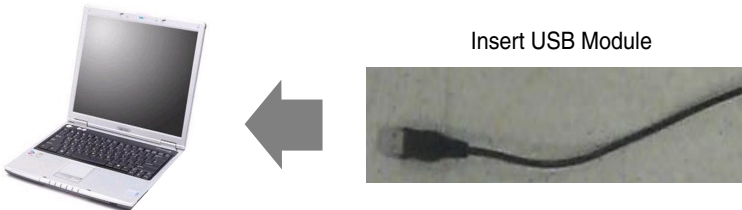


- 10) After inserting the USB module, new hardware searching wizard will be executed automatically.




Check 'Install from a list or specific location (Advanced)' and click 'Next' button.


- 11) Check 'Don't Search. I will choose the driver to install' and click 'Next' button.

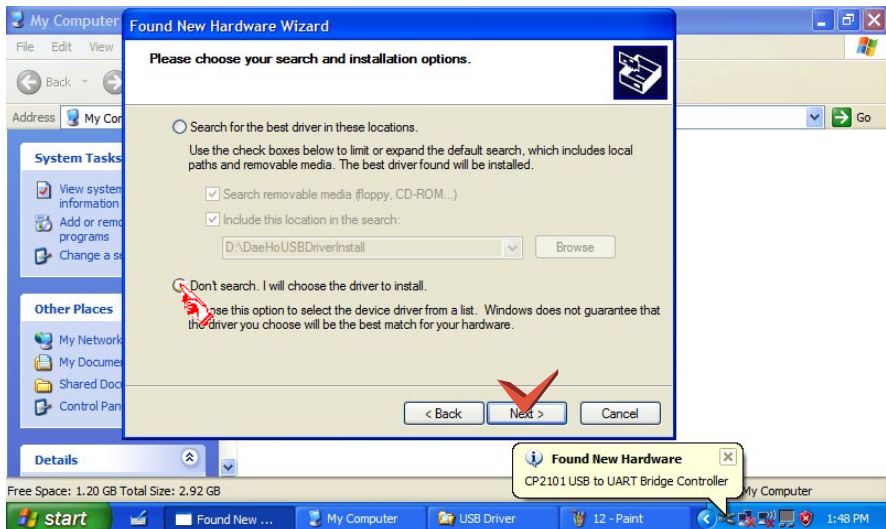


12) Check 'Show compatible hardware' and Select 'Daeho USB to UART Bridge' and click 'Next' button.

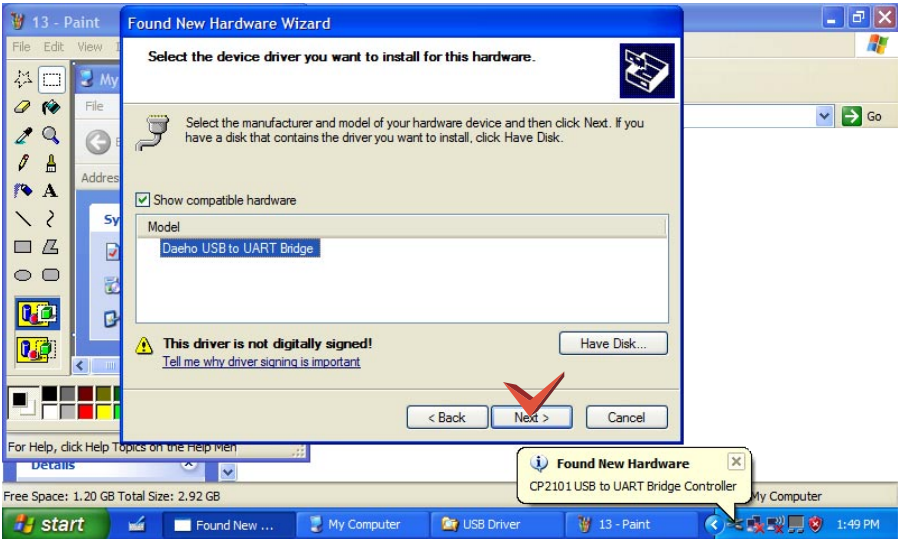

13) Now Installing wait..

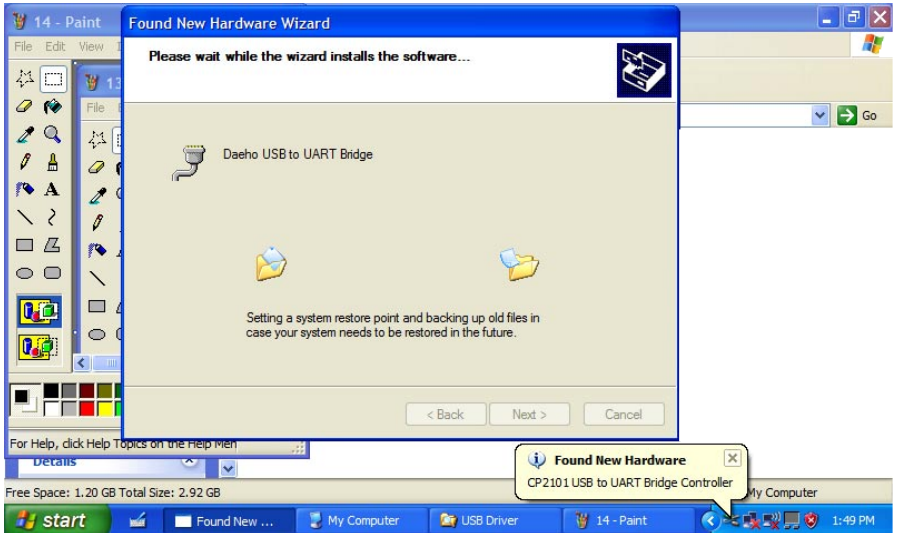



14) When the installation is completed, please click on 'Finish' button.

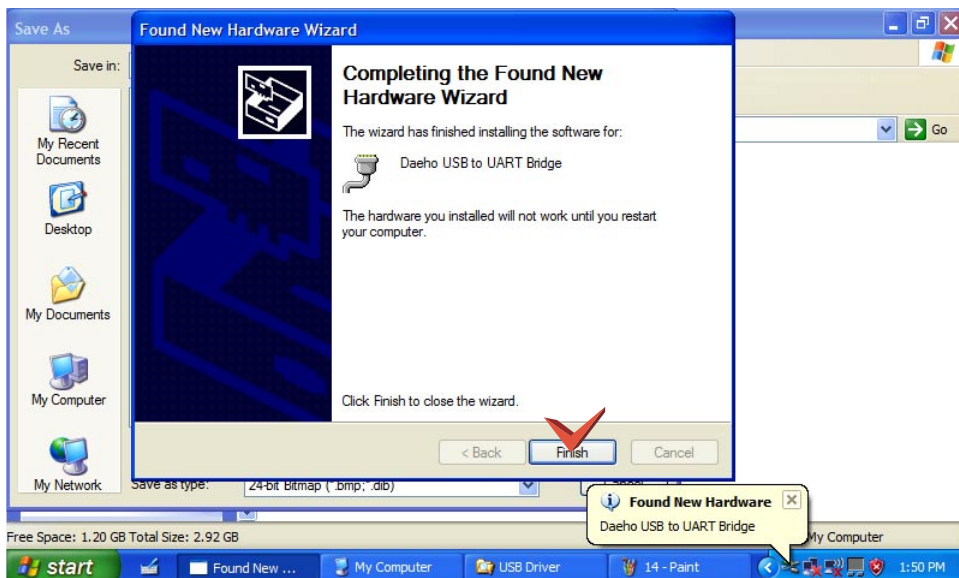

3. Port set-up



- LGMV Program will be operated correctly when it is connected COM1 Serial port : COM1 port only
- DaeHo driver will be set randomly. For example, a COM3 or COM4 on 'Ports (COM&LPT)'. So, you should change the COM port to COM1 port. Please refer the below

1) After finishing the installation you can find and check the 'DaeHo USB to UART Bridge' device in ['Start' → 'settings' → 'Control Panel' → 'System Properties' → 'Hardware' → 'Device manager']

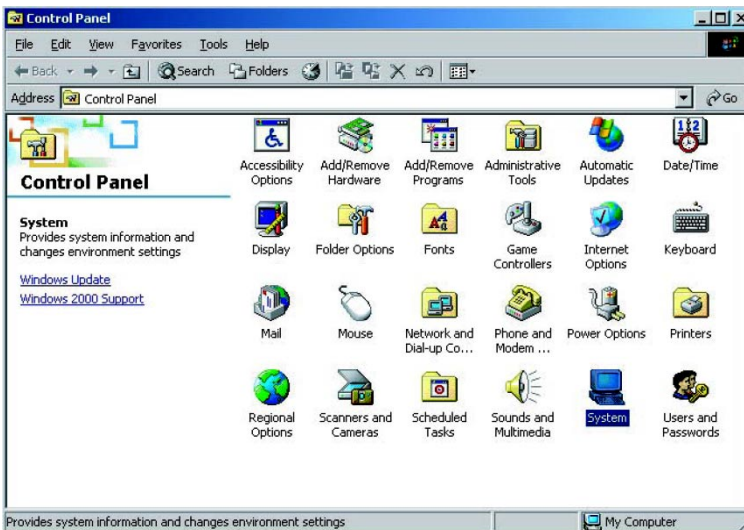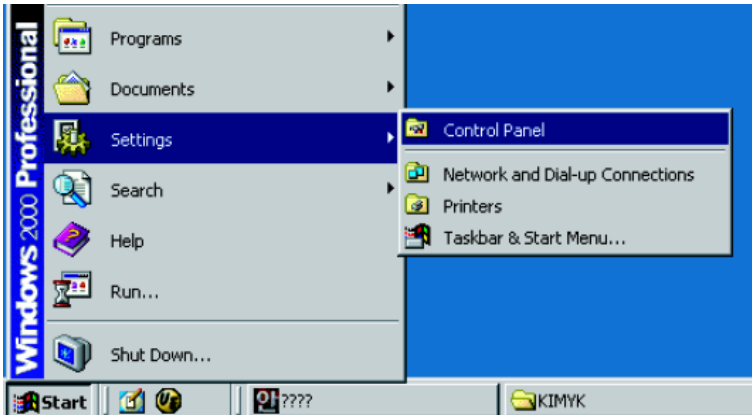





- 2) Select 'Device manager' and then 'Device Manager' window appears. Then select 'Ports(COM & LPT)' in 'Device manager' window

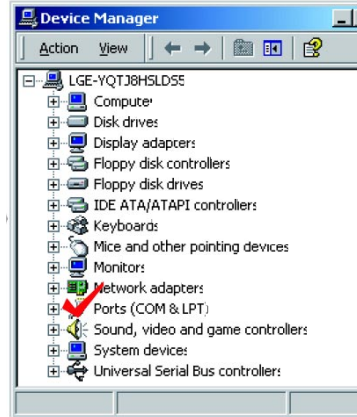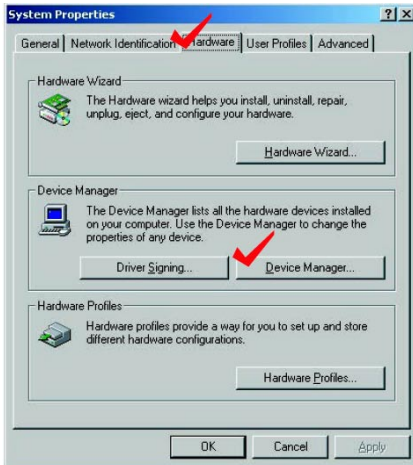


- 3) Select 'DaeHo USB to UART Bridge' port , click right button of your mouse, and choose 'Properties' as shown above Select 'Port Settings' in 'Communication Port' window and click 'Advanced' button.

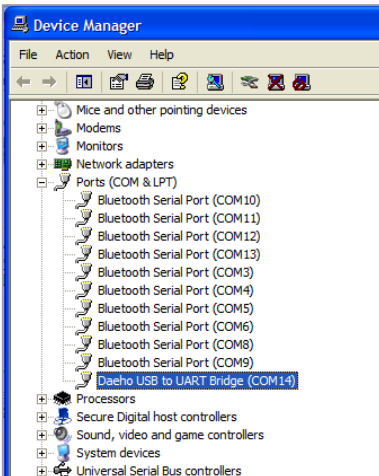

4) Select 'Port Settings' in 'Communication Port' window and click 'Advanced' button.

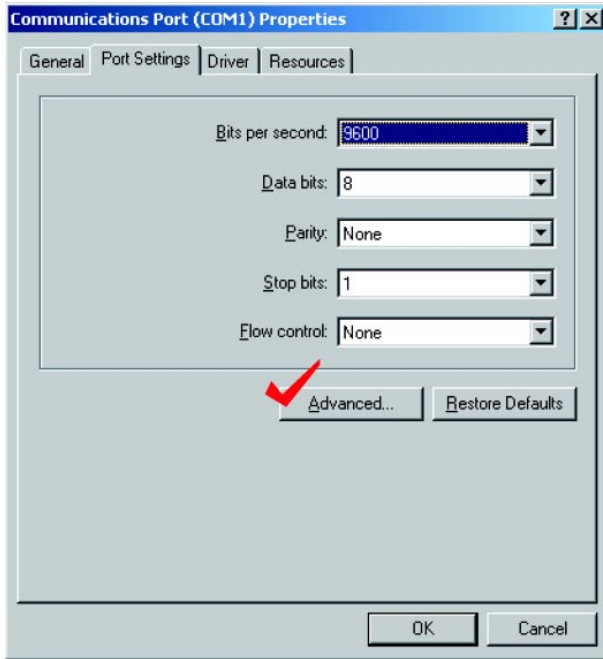

5) Check 'COM1' port and click 'OK' Button

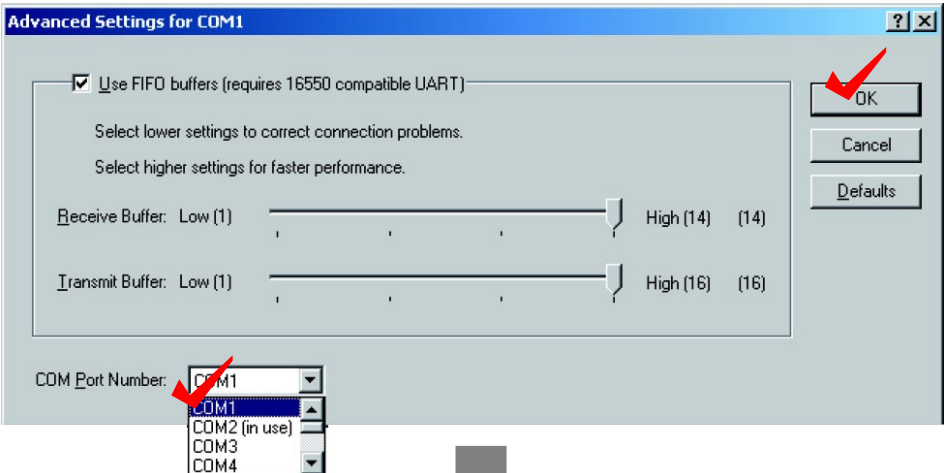

6) All Installation is Finished

